

Lenovo/IBM 20V4.5A YOGA USB 90W

Lenovo

Z51-70,

IdeaPad series

700-15ISK, Y40, Y40-70, Y40-80, Y50, Y50 TOUCH, Y50-70, Y50-70 TOUCH, Y50-80, Y50-80 TOUCH, Z510, Z710,

Thinkpad series

HELIX, L440, L540, S440, S5, S531, S540, T440, T440P, T440S, T540P, X1 CARBON, X240, YOGA,

ThinkPad Edge series

E431, E440, E531, E540,

Lenovo/IBM 20V3.25A YOGA USB 65W

Lenovo

A3200, A3200-B101, A3200-B102, A3200-B103, B4400S, B5400, FLEX2, G50-80, G70-70, G70-80, YOGA2 PRO, Z51-70,

IdeaPad series

G400, G400S, G405S, G500, G500S, G505, G505S, G510, G700, M5400, S500, U330, U330 TOUCH, U330P, U430, U430P, U530, U530 TOUCH, Z710,

IdeaPad Yoga series

13,

Thinkpad series

E431, E531, HELIX, L540, S3, S431, S440, S531, S540, T431S, T440, T440S, X1, X1 CARBON, X240,

ThinkPad Edge series

E431, E440, E531, E540,

Lenovo/IBM 20V2.25A YOGA USB 45W

Lenovo

B40, B40-30, B40-45, B40-70, B50, B50-30, B50-70, G50-30, G70-80, N20 CHROMEBOOK, N20P CHROMEBOOK, N40, N50, S20 TOUCH,

IdeaPad series

G40, G40-30, G40-45, G40-70, G40-70M, G50, G50-30, G50-45, G50-70, G50-70M, S210, S215, S410P, S510P, Z40, Z50,

IdeaPad Flex series

14, 14M, 15, 15M, 2,

IdeaPad Yoga series

11, 11.6, 11S, 2, 2 PRO,

Thinkpad series

11E, 11E CHROMEBOOK, HELIX, S431, T431S, X240S, YOGA 11E, YOGA 11E CHROMEBOOK,

Yoga series

500-14IBD,