

**Samsung 19V 2.1A 19V2.37A 3.0mm\*1.1mm**

Samsung Galaxy View 18.4 SM-T670 SM-T677 SM-T670NZKAXAR

Samsung Series 3 NP300U1A NP305U1A NP300u1a-a01us Samsung Series 5 NP530U3C NP540U3C NP530U3B NP530U3BI NP535U3C:  
NP530U3B-A01US NP530U3C-A01US NP535U3C-B01US NP540U3C-A01UB NP540U3C-A02UB NP540U3C-A03UB

Samsung Series 5 Chromebook 500c21 Xe500c21 Xe550c22 Xe550c22-a01us

Samsung Series 7 Slate XE700T1A  
XE700T1A-A01US XE700T1A-A02US XE700T1A-A03US XE700T1A-A05US

Samsung Series 9 NP900X3E NP900X3B NP900X3C NP900X4B NP900X4D NP900X4C NP900X5N NP900X1A NP900X1B NP900X3A NP900X3D:  
NP900X1B-A02 NP900X1B-A02US NP900X3A-A03US NP900X3A-A05US NP900X3A-B01UB NP900X3A-B02US NP900X3A-B06US NP900X3B-A01US NP900X3C-A01US NP900X3C-A04US NP900X3C-A05US NP900X3D-A01US NP900X3D-A03US NP900X3D-A04US NP900X3E-A02US NP900X4B-A02US NP900X4C-A01US NP900X4C-A03US NP900X4C-A06US NP900X4C-A07US NP900X4C-K01US NP900X4D-A02US NP900X4D-A03US NP900X4D-A05US

Samsung ATIV Book 5 NP540U4E

Samsung ATIV Book 9 13.3" 15" NP900X3L NP900X5L NP900X3L-K03US NP900X3L-K04US NP900X3L-K06US NP900X5L-K02US

Samsung ATIV Book 9 Lite Plus NP900X3F NP900X3G NP900X3K NP905S3G NP915S3G NP930X5J NP940X3G NP940X3K NP940X3L NP940X5J:  
NP905S3G-K02US NP915S3G-K01US NP915S3G-K02US NP915S3G-K04US NP915S3G-K05US NP940X3G-K01US NP940X3G-K03US NP940X3G-K04US NP940X3G-K06US NP940X3G-S03US NP940X5J-K01US NP940X5J-K02US NP940X3K-K02US NP-940X3L-K01US NP540U4E-K01US

**Acer 19V 2.1A 19V2.37A 3.0mm\*1.1mm**

Acer Chromebook R 11 13 14 15 C730E, C738T, C810, CB3-111, CB3-131, CB3-431, CB3-531, CB3-532, CB5-132T, CB5-311, CB5-311P: CB3-111-C4HT CB3-111-C670 CB3-111-C6EQ CB3-111-C8UB CB3-131-C3SZ CB3-131-C3VC CB3-431-COAK CB3-431-C5EX CB3-431-C5FM CB3-431-C5XK CB3-431-C7M1 CB3-531-C4A5 CB3-532-C47C CB5-132T-C1LK CB5-132T-C32M CB5-132T-C8ZW CB5-311-T1UU CB5-311-T677 CB5-311-T7NN CB5-311-T9B0 CB5-311-T9Y2 CB5-311P-T9AB CB5-571-C4G4 C730E-C4BA C730E-C555 C738T-C44Z C810-T78Y C810-T7ZT C810-T9CA

Acer Aspire V 13 V3-331, V3-371, V3-372T: V3-331-P0QW V3-331-P11X V3-331-P4TE V3-371-51UJ V3-371-56R5 V3-371-57JZ V3-371-596F V3-372T-5051

Acer Aspire Switch 11, 11V, 12, Alpha 12: SW5-171, SW5-171P, SW5-173, SW5-173P, SW5-271, SA5-271, SA5-271P: SW5-171-325N SW5-171-34ZR SW5-171-39LB SW5-171-80KM SW5-171-86EE SW5-171P-82B3 SW5-173P-61RD SW5-271-62X3 SW5-271-64V2 SA5-271-57DS SA5-271-594J SA5-271-71NX SA5-271-764D

Acer Aspire One Cloudbook 11, 14: AO1-131, AO1-131M, AO1-431, AO1-431M: AO1-131-C620 AO1-131-C7DW AO1-131-C9PM AO1-131-C9RK AO1-131M-C1T4 AO1-131M-C667 AO1-431-C3TM AO1-431-C4XG AO1-431-C7F9 AO1-431-C8G8 AO1-431M-C49H

Acer Swift 3 SF314-51: SF314-51-52DH

Acer Spin 5 SP513-51: SP513-51-30EU, SP513-51-55ZR

**Asus 19V1.75A 19V2.37A 3.0mm\*1.1mm**

Asus Zenbook, Zenbook Prime, Flip: U38DT U38N UX21A UX31A UX31LA UX32A UX32VD UX42VS UX52VS UX301 UX301LA UX302 UX302LA UX303 UX303L UX303LA UX303LB UX303LN UX303U UX303UA UX303UB UX305C UX305CA UX305F UX305FA UX305L UX305LA UX305UA UX330UA UX360C UX360CA :  
UX301LA-DH71T UX301LA-XH72T UX302LA-BHI5T08 UX303LA-DB51T UX303LA-DS51T UX303LA-DS52T UX303LA-US51T UX303LB-DS74T UX303LN-DB71T UX303UA-DH51T UX303UB-DH74T UX305CA-DHM4T UX305CA-EHM1 UX305FA-ASM1 UX305FA-USM1 UX305LA-AB51 UX31A-BHI5T11 UX31A-DH51 UX31A-R5102H UX32A-DB31 UX32A-XB51 UX32VD-DB71 UX32VD-DH71 UX32VD-DS72

Asus Chromebook C200 C200M C200MA C202S C300 C300M C300MA C300SA C301SA:  
C200MA-DS01 C300MA-BBCLN10 C300MA-BBCLN12 C300MA-DB01 C300MA-DH01 C300MA-DH02

Asus VivoBook 1015E D553M E403S E403SA F200CA F201E F202E F553M F553MA F556U F556UA K200MA K553MA Q200 Q200E Q302LA Q302U Q302UA Q303UA S200 S200E X102B X102BA X200 X200CA X200LA X200M X200MA X201 X201E X202 X202E X540L X540LA X540S X540SA X553M X553MA X553S X553SA :  
1015E-DS01 1015E-DS03 K200MA-DS01T K200MA-DS01T(S) K200MA-DS01T-WH(S) K553MA-DB01TQ Q200E-BCL0803E Q200E-BHI3T45 Q200E-BSI3T08 Q302UA-BHI5T20 S200E-RHI3T73 X102BA-BH41T X200CA-DB01T X200CA-DB02 X200CA-HCL1104G X200CA-SCL0301Q X200MA-BCL0705Z X200MA-RCLT07 X200MA-RCLT08 X200MA-SCL0505F X200MA-US01T

Asus Flip Q302L Q503U Q503UA Q504U Q504UA Q302LA-BBI5T14 Q302LA-BBI5T19 Q302LA-BHI3T09 Q302LA-BHI3T11 Q302LA-BSI5T16

Asus Taichi 21 31 Taichi21-DH51 Taichi31-NS51T

Asus EeeBook E402MA E402S E402SA E402MA-EH01

Asus Transformer Book Flip Trio T300L T300LA TP300L TP300LA TP300LD TX201 TX201LA T300LA-DH51T TP300LD-RHI5T15