



MANUAL

**EM7080 - hdMEDIA RT**

[WWW.EMINENT-ONLINE.COM](http://WWW.EMINENT-ONLINE.COM)

## EM7080 - hdMEDIA RT



### Warnings and points of attention

Repairing of the product should be done by qualified Eminent staff!

### Table of contents

1.0 Introduction .....	3
1.1 Functions and features .....	3
1.2 Packing contents .....	3
2.0 Explanation of the media player .....	4
3.0 Explanation of the remote control .....	5
4.0 Mounting a hard disk .....	5
5.0 Connecting the media player to your television .....	6
5.1 Connecting to your television using HDMI (Recommended) .....	6
5.2 Connecting the media player using component (Y/Pb/Pr) .....	7
5.3 Connecting to your television using composite .....	7
5.4 Audio Connections .....	7
5.5 Connecting to your network .....	8
6.0 Setting up the media player .....	8
6.1 Formatting a new hard disk (optional) .....	8
6.2 Language settings .....	9
6.3 Video settings .....	9
6.4 Photo settings .....	9
6.5 Setting up sound .....	9
6.6 Network setup .....	10
7.0 Copying data or media files using USB .....	10
8.0 Copying data or media files to the built-in hard disk using 'File Copy' .....	11
9.0 Playing Media .....	12
9.1 Blu-Ray ISO .....	12
9.2 DVD playback .....	13
9.2.1 DVD ISO .....	13
9.2.2 DVD Video _Ts .....	13
9.3 Playing other video formats .....	13
9.4 Playing music and other audio .....	14
9.5 Playing photos and images .....	14
9.6 Playing video and audio from an external (USB) DVD player .....	15
10.0 Play Media through your network .....	15
10.1 Turning your computer into a UPnP server (Windows) .....	15
10.2 Play media through your network (UPnP) .....	16
10.3 Play media through your network (Samba) .....	17
11.0 Other functions .....	17
12.0 Frequently asked questions .....	18
13.0 Service and support .....	19

14.0 Warranty conditions .....	19
15.0 Declaration of Conformity .....	19

## 1.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has undergone extensive testing by Eminent's technical experts. Should you experience any problems with this product, you are covered by a five-year Eminent warranty. Please keep this manual and the receipt in a safe place.

*Register your product now on [www.eminent-online.com](http://www.eminent-online.com) and receive product updates!*

### 1.1 Functions and features

The Eminent EM7080 hdMEDIA RT turns your living room into a movie theatre. Thanks to the HDMI 1.3 support, you can not only enjoy your movies in crystal clear Full HD, but the sound experience is also state-of-the-art: The hdMEDIA RT supports stereo, AC3, WMA, AAC, DTS, and DTS-HD down mix . Because the EM7080 is very user friendly, it is fun and easy to watch your movies in Full HD!

You can build a 3,5 " SATA hard disk into the unit so that you have more than enough disk space for all your media files. And, in case you do run out of space, simply connect a USB memory stick, hard disk or external (e)SATA hard disk for even more storage space! Use other USB devices like digital camera's, camcorders and (most) portable music players to enjoy the EM7080 hdMEDIA RT. The EM7080 hdMEDIA RT even supports external USB DVD-ROM drives!


### 1.2 Packing contents

The following parts need to be present in the package:

- EM7080 HD media player
- Power supply
- HDMI cable
- USB A-B cable
- Optical cable
- Composite cable
- Remote control
- User Manual

## 2.0 Explanation of the media player

The media player has the following connections on the back of the casing:

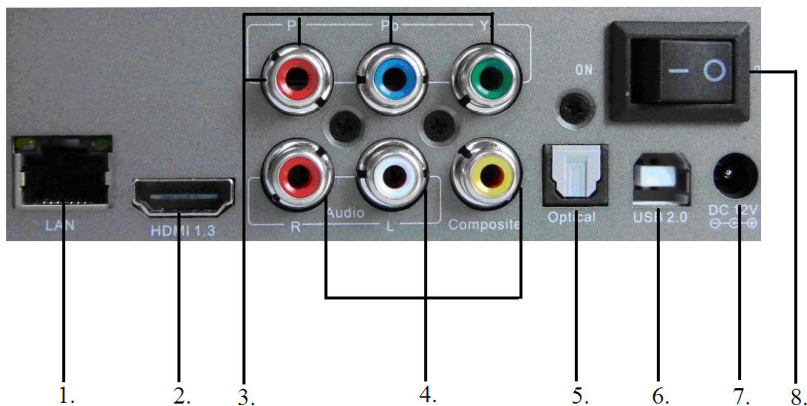


1. Network connection. Connect your network cable to this connection.
2. HDMI 1.3 connection. Use this connection to connect the hdMEDIA RT to the HDMI connection on your television.
3. Component connection. Use these connections to connect the hdMEDIA RT to the component connections on your television.
4. Composite connections. Use these connections to connect the hdMEDIA RT to the composite connections your television
5. Optical (Toslink) connection. Use this connection to connect your receiver to the hdMEDIA RT.
6. USB host. USB connection used to connect the hdMEDIA RT to your computer.
7. Power connection. Used to connect the power supply.
8. On/off switch. Use this switch to turn on or turn off the hdMEDIA RT.

*At the front of the case you will find two USB ports for harddisks and memory sticks, and one (e)SATA port for external disks.*

## 3.0 Explanation of the remote control

In the following chapter, we will explain the remote control. The picture below displays the different buttons and we will explain which functions these buttons have.

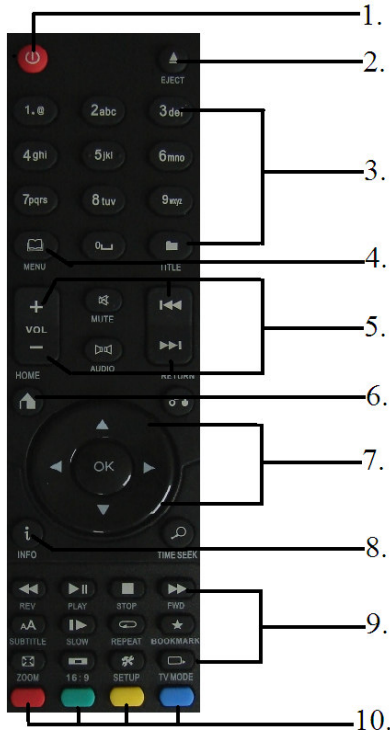

1. On/Off switch. Use this button to turn on or turn off the EM7080.
2. Eject button. Use to open or close the tray of the DVD player.
3. These buttons are the alphanumeric buttons, used to enter data.
4. Menu button. Used to access the menu.
5. Function buttons. Increase or decrease the volume.
6. Home button. Use this button to return directly to the main menu.
7. Navigation buttons. Used to navigate through the menus.
8. Info button. Use this button to see details about the media file you are playing.
9. Standard buttons. Used during the playback of media files.
10. Selection keys. Used for copying or deleting media files.

## 4.0 Mounting a hard disk

It is not necessary to mount a 3,5 inch SATA hard disk into the media player because you can select many sources for media files. If you want to make full use of all the possibilities of the media player you will need to mount a hard disk. Follow the instructions below to mount a hard disk:

**Note:** The packing contains a small transparent bag of screws. You will need the two large screws contained inside, as well a Philips head (+) screwdriver. It is best to perform the operation on a soft surface, to avoid any scratches to the unit.

1. Take your EM7080 and remove the screws on all four corners on the bottom of the device.
2. Gently remove the lid. Be careful, the fan is connected to main board!
3. Disconnect the fan from the fan connector. Note the orientation of the connector.
4. Place the lid safely out of the way for now.
5. Lower the SATA hard disk into the media player.
6. Note the grey SATA connector on the main board, and slide the disk into it.
7. Push the SATA hard disk towards the SATA connector until the connection is locked down tight.
8. The hard disk will now be resting on two pins that will hold the hard disk in place if it is aligned correctly. Do not hold the device upside down from this point!
9. Put the EM7080 on its side, and screw in the two larger screws to hold the hard disk in place.
10. Put the EM7080 back on its feet, and place the lid back in closed position.
11. You can now safely flip over the EM7080 and screw back the four small screws in all four corners of the device.
12. You're done, the EM7080 is now ready to use the internal hard disk.

*If you are using a new hard disk, then use the steps in chapter 6.1 to prepare the hard disk for usage.*

## 5.0 Connecting the media player to your television

### 5.1 Connecting to your television using HDMI (Recommended)

The best image quality can be obtained by connecting the media player to your television using a HDMI cable. Of course, your television needs to be equipped with a HDMI connection.

1. Connect the HDMI cable to the HDMI output of the media player.
2. Connect the other side of the HDMI cable to an available HDMI input of your television.

*Note: Make sure your media player and television are both turned off before connecting your cables. This way you can prevent any possible damage to your devices.*

## 5.2 Connecting the media player using component (Y/Pb/Pr)

If your television is not equipped with an HDMI connection, or your HDMI connections are already occupied, you can connect the EM7080 using component. Using component, you can also use HD resolutions.

1. Connect the red plug to the red component connection on the EM7080.
2. Connect the blue plug to the blue component connection on the EM7080.
3. Connect the green plug to the green component connection on the EM7080. Afterwards, connect the red, blue and green plugs on the other side of the component cable to the corresponding component input connections on your television set.

**Note!** The red component cinch is not an audio output cable!

## 5.3 Connecting to your television using composite

If your television is not equipped with an HDMI connection or component connections, you can use the composite connection on the hdMEDIA RT. Connect the yellow plug to the yellow cinch connection on the EM7080.

Now you can connect the yellow plug on the other side of the cable to the yellow cinch connection on your television.

## 5.4 Audio Connections

There are different ways to enjoy the sound the EM7080 produces. You can connect the red and white plugs of the 'composite' cable to your television or receiver to create a '2.0' stereo effect. If your television has HDMI audio support, you can make use of the HDMI cable order to receive both image and digital sound on your television, in stereo only.

If you use a (certified) DTS receiver, then you can enjoy true digital sound by connecting the player over HDMI 1.3 to a digital input on your receiver.

You can also use the media player's SPDIF output. If your receiver is equipped with a optical (TOSLINK) input, then you can enjoy the media player's digital sound during movie and music play.

1. Connect the optical cable to the optical output of the media player.
2. Connect the other side of the optical cable to the corresponding input of your receiver.

**Note:** Because of bandwidth requirements, the TOSLINK optical output cannot be used to transport the raw DTS-HD signal. You will require a HDMI 1.3 digital receiver

*to enjoy DTS-HD sounds. Audio with DTS-HD tracks will be played back as DTS-Core audio over TOSLINK.*

## 5.5 Connecting to your network

The media player also has the capability to be connected to your network by using the media player's 100Mbps network connection. Doing so, you can retrieve media from your network or your NAS (For example: The Eminent NAS type EM4071 or EM4072) and play these media files through the media player on your television.

1. Connect a network cable to the media player's network connection.
2. Connect the other side of the connection cable to a network connection of your router, modem or switch.

*In order to use the media player's networking capabilities you have to setup the media player for network usage. These steps can be found in chapter 6.6.*

## 6.0 Setting up the media player

Before using, you have to setup the media player. Of course, it is very convenient to be able to use the preferred language, and be able to setup the media player for network usage. If you have a High Definition television which is connected by HDMI, you can setup the media player in order to play the media contents on high resolution (Both video and sound). Of course, there are many other settings to change on the media player. We will explain these settings in the next chapters.

*As soon as the media player has started for the first time, the media player will ask you to fill in a few items like the language and the LAN setup . Simply press the 'Return' button on the remote control a few times to navigate to the main menu.*

### 6.1 Formatting a new hard disk (optional)

1. Use the arrow keys to navigate to 'Setup' and press the 'OK' button on the remote control.
2. Navigate to 'System'.
3. Select 'HDD format' and press the 'OK' button.
4. Select 'HDD1' and press the 'OK' button.
5. You will see a warning on your screen. Select 'OK' and press the 'OK' button.
6. Select 'Format'. Select 'OK' and press the 'OK' button.
7. The formatting can take some time, be patient!
8. After formatting, you will see a notification, telling you that formatting the hard disk has been completed. Press the 'OK' button.



## 6.2 Language settings

1. Use the arrow keys on the remote control to navigate to 'Setup' and press the 'OK' key on the remote control.
2. Navigate to 'System'.
3. Select 'Menu Language' and press the 'OK' button. Use the arrow keys to select the desired language at the right side of the menu.
4. Once the desired language is selected, press the 'OK' button to save the this setting.
5. Press the 'HOME' button to return to the main menu.

## 6.3 Video settings

1. Use the arrow keys on the remote control to navigate to 'Setup' and press the 'OK' key on the remote control.
2. Navigate to 'Video' and use the arrow keys to navigate to 'TV System' and press the 'OK' button.
3. Use the arrow keys to select the desired resolution and refresh rate and then press the 'OK' button. The new resolution will be set.
4. Navigate to 'Aspect Ratio' and press the 'OK' button.
5. Use the arrow keys to select the desired aspect ratio. Select '16:9' if you have a wide screen television and press the 'OK' button.
6. Press the 'Home' button to return to the main menu.

## 6.4 Photo settings

The EM7080 can display photos and images. You can also setup the EM7080 for a slideshow and the corresponding visual effects.

1. Navigate to 'Setup' and press the 'OK' button on the remote control.
2. Navigate to 'MISC' and use the arrow keys to navigate to 'Slide Show Timing' and press the 'OK' button.
3. Select the time interval between the images, for example, 5 seconds and press the 'OK' button. This means a new image will appear every 5 seconds.
4. Select 'Transition Effect' and press the 'OK' button. Select the desired visual effect you want to see the moment the media player displays a new image. Choose 'All Effect Shuffle' if you want all available effects to be displayed randomly the moment the media player displays a new image .

## 6.5 Setting up sound

1. Use the arrow keys on the remote control to navigate to 'Setup' and press the 'OK' key on the remote control.
2. Navigate to 'Digital Output' and press the 'OK' button.
3. Select the desired sound setting and press the 'OK' button. If you have connected the EM7080 using an optical cable, then select SPDIF LPCM or

SPDIF RAW, if you have only connected the HDMI cable, then select HDMI RAW which enables the playback of virtually any audio codec.

4. Press the 'HOME' button to return to the main menu.

*If you are using a DTS sound system, you can use the 'RAW' settings in order to receive digital sound.*

## 6.6 Network setup

In the following steps we will explain how to setup the media player for network usage.

1. Use the arrow keys to navigate to 'Setup' and press the 'OK' button on the remote control.
2. Navigate to 'Network'.
3. Select 'Wired Lan Setup' and press the 'OK' button.
4. You can now select the following methods of connecting:

**DHCP IP** (automatic obtaining an IP-address):

1. Choose 'DHCP IP' if there is a DHCP server in your network which can provide the media player the correct IP-Address settings. Press the 'OK' button on the remote control.

*In 99% a DHCP connection will be suitable.*

**FIX IP** (Fill in a static IP-address):

1. Choose 'FIX IP' if there is not a DHCP server in your network which forces you to fill in the correct IP-Address settings yourself.
2. Press the 'OK' button on the remote control to advance in the IP-Address settings menu.
3. Follow the instructions on the screen to fill in the correct settings. You will need to fill in an IP-address within the IP range of your network, and, it needs to be an unique IP-address (It may not be already in use within your network).
4. The subnet mask, gateway and DNS addresses are the same as used in your network.
5. Press the 'OK' button on the remote control. Select 'CONFIRM' and press the 'OK' key to save the settings.
6. Press the 'Home' button on the remote control in order to return to the media player's main menu.

## 7.0 Copying data or media files using USB

The EM7080 can also be connected directly to your computer using a USB cable. There is no need to install any additional software or taking difficult steps. Just connect the USB cable and start copying!

1. Make sure your computer is completely started.
2. Make sure the media player is turned on and is completely started.
3. Connect the USB cable to the USB port at the back of the EM7080.
4. Connect the other side of the USB cable to a free USB port on your computer.
5. A message will appear on your television: 'USB Plug-in event Detected'. Select 'Confirm' and press the 'OK' button.
6. Now use the Windows Explorer on your computer to browse to the local hard disks.
7. A new hard disk will be found. This is the media player's hard disk.
8. First, browse the computer's hard disk to locate the media files you want to copy.
9. Right-click these media files and choose 'Copy to' and then choose the media player's hard disk.
10. Once the copying of media files has been finished, you can disconnect the USB cable from the media player.
11. The media player will then automatically return to it's main menu.

## 8.0 Copying data or media files to the built-in hard disk using 'File Copy'

The EM7080 has the opportunity to copy data from USB devices, network, and external DVD player to the built-in hard disk. Also, copying from the internal hard disk to other devices is possible. This way, there is no need to connect the hard disk to your computer in order to copy media files to your hard disk. Use the following steps to copy data to your hard disk.

1. If you want to copy data from a USB device or from an external (e)SATA disk, then you have to connect the USB device to one of the front USB ports, or in case you use (e)SATA hard disk, connect the (e)SATA cable to the (e)SATA port.
2. Use the arrow keys to navigate to 'File Copy' and press the 'OK' button on the remote control.
3. You will now see a 'Source' and a 'Destination'. Here, you can select the source (left panel) you want to copy media files from, and the destination (right panel) you want to copy media files to.
4. In this example we will explain how to copy data from your external USB device to the internal hard disk.
5. Select 'USB' at the 'Source' field and press the 'OK' button.
6. You will be redirected automatically to the 'Destination' field. Select the destination, in this case, the hard disk, or 'HDD' and press the 'OK' button.
7. Select the source drive at 'Source' and press the 'OK' button.
8. At the source field, select the folder you want to copy. Press the red button on the remote control to select this folder. The folder will be marked.
9. Press the right arrow key, you will be direct to the 'Destination' field. Press the 'OK' button.

10. You can now select the folder you want to copy to and press the 'OK' button, or you can select 'NEW DIRECTORY' and press the 'OK' button.
11. If you have selected 'NEW DIRECTORY', you can now give a name to the folder using the remote control. Once you have given the folder the correct name, navigate to 'OK' in the menu and press the 'OK' button.
12. Press the right arrow key. You will be asked to 'COPY', 'MOVE' or 'CANCEL'. Select 'COPY' and press the 'OK' button
13. The notification 'FileCopy Completed!' will appear. Press the 'HOME' button to return to the main menu.

*You can also use 'FileCopy' to copy media files from the internal hard disk to an external USB and (e)SATA memory stick or hard disk.*

## 9.0 Playing Media

If you have finished setting up the media player and you have connected a USB hard disk or USB memory stick, you can playback the available media from the connected USB device, or from the internal hard disk. One of the main features of the media player is the ability to playback many sorts of video files. 'Regular' video files like .MOV, .MKV, .AVI and DVD ISO's, VIDEO\_TS files and even Blu-Ray files can be handled by the EM7080.

We will explain how to view or play the different media types.

### 9.1 Blu-Ray ISO

The EM7080 is able to playback Blu-Ray ISO's / AVCHD ISO. Use the following steps to playback these ISO files.

*By default, the EM7080 is not able to playback secured commercial Blu-Ray ISO's. The EM7080 is however to playback Blu-Ray ISO's which do not have any form of security.*

1. Make sure the media player is turned on and has completely started.
2. Use the arrow keys to navigate to 'Movies' and press the 'OK' button.
3. Select the device or source you want to use for video playback. Select 'HDD' if you want to playback video files located on the internal hard disk and press the 'OK' button.
4. Select the hard disk and press the 'OK' button.
5. Select the folder where the Blu-Ray ISO's is located and press the 'OK' button.
6. The ISO file will be displayed. Select the ISO and press the 'OK' button. The playback of the ISO file will start.
7. Press the 'OK' button again for full screen playback.

*Note: Press the 'SUBTITLES' button to see subtitles or change the language of the subtitles, size of the subtitles, color of the subtitle etc.*

*Press the 'MENU' button to access the menu which allows you to easy access to the chapter list and subtitle languages.*

## 9.2 DVD playback

### 9.2.1 DVD ISO

1. Make sure the media player is turned on and is completely started.
2. Use the arrow keys to navigate to 'Movies' and press the 'OK' button.
3. Select the device or source you want to use for video playback. Select 'HDD' if you want to playback video files located on the internal hard disk and press the 'OK' button.
4. Select the hard disk and press the 'OK' button.
5. Select the folder where the DVD ISO is located and press the 'OK' button.
6. The DVD ISO will be displayed. Select the file and press the 'OK' button. The video file will start to play.
7. Press the 'OK' button again for full screen playback.

*Note: Press the 'SUBTITLES' button to see subtitles or change the language of the subtitles. Press the 'MENU' button to access the menu of the video file. The 'MENU' button also gives you access to the menu which allows you to skip chapters amongst others.*

### 9.2.2 DVD Video\_Ts

1. Make sure the media player is turned on and is completely started.
2. Use the arrow keys to navigate to 'Movies' and press the 'OK' button.
3. Select the device or source you want to use for video playback. Select 'HDD' if you want to playback video files located on the internal hard disk and press the 'OK' button.
4. Select the hard disk and press the 'OK' button.
5. Select the folder where the video files are located and press the 'OK' button.
6. Select the folder '/VIDEO\_TS/' and press the 'OK' button.
7. If there is a 'VIDEO\_TS.IFO' select this file and press the 'OK' button. This IFO file will direct you to the menu of the DVD. If there is not an IFO file, then select the correct .VOB file and press the 'OK' button to start the playback of the file.

## 9.3 Playing other video formats

The hdMEDIA RT plays almost all other video formats like .AVI, .MKV etc. Use the following steps to play other video formats.

1. Make sure the media player is turned on and is completely started.
2. Use the arrow keys to navigate to 'Movies' and press the 'OK' button.
3. Select the device or source you want to use for video playback. Select 'HDD' if you want to playback video files located on the internal hard disk and press the 'OK' button.
4. Select the hard disk and press the 'OK' button.
5. Select the folder where the video files are located and press the 'OK' button.
6. The video files will now be shown. Select the video file you want to playback and press the 'OK' button.
7. The video file will now start to play.

*Note: Some MKV files do have subtitles in the MKV file itself. It is possible to add a SRT subtitle file, but then, the MKV file must not have a subtitle in the MKV itself. SRT subtitles can only be used without having the subtitles in the MKV itself. You can always put the SRT file into the MKV container using 'MKVMERGE' which you can download from the internet.*

## 9.4 Playing music and other audio

1. Make sure the media player is turned on and is completely started.
2. Use the arrow keys to navigate to the 'Music' and press the 'OK' button.
3. Select the device or source you want to use for music or audio playback. Select 'HDD' if you want to playback music or audio files located on the internal hard disk and press the 'OK' button.
4. Select the hard disk and press the 'OK' button.
5. Select the folder where the music or audio files are located and press the 'OK' button.
6. The music or audio files will be displayed. Select the file you want to play and press the 'OK' button. The music or audio files will start to play.
7. If you have multiple audio files listed, the EM7080 will playback these files once the selected file has finished playing.

*Note: Press the blue button to rename or delete the music or audio file.*

*Hint: You can playback a Music file and then use the menu of the EM7080. The selected Music or audio file will be heard as background music.*

## 9.5 Playing photos and images

1. Make sure the media player is turned on and is completely started.
2. Use the arrow keys to navigate to 'Photo' and press the 'OK' button.
3. Select the device or source you want to use for music or audio playback. Select 'HDD' if you want to playback music or audio files located on the internal hard disk and press the 'OK' button.
4. Select the hard disk and press the 'OK' button.

5. Select the folder where the images are located and press the 'OK' button.
6. Select the image you want to view and press the 'OK' button. An image will appear on the right side.
7. Press the 'OK' button again to view the image in full screen.
8. If you have set slideshow settings in the chapter 'Photo settings', the slideshow and corresponding visual effects will start automatically.

## ***9.6 Playing video and audio from an external (USB) DVD player***

You can connect a USB DVD player to the EM7080 hdMEDIA RT. The EM7080 will recognize the USB DVD player automatically.

1. Make sure the media player is turned on and is completely started.
2. Plug-in the DVD player's USB cable to a USB port on the EM7080 hdMEDIA RT, the EM7080 will recognize the DVD player automatically.
3. Insert a DVD disk. Usually, the disk will be played automatically. If not, use the following steps:
4. Use the arrow keys to navigate to 'Movies' and press the 'OK' button.
5. Select the device or source you want to use for video playback. Select 'DVD' if you want to playback video or audio files located on the DVD-ROM and press the 'OK' button.
6. Select the DVD player and press the 'OK' button.
7. The DVD will start automatically and you will see the DVD menu on your screen automatically.

## **10.0 Play Media through your network**

Since the EM7080 is equipped with a Samba and UPnP client, you are able to stream data through the network.


Once your media player is connected to your network, and you have made the correct network settings, you can play media files through your network. If you want to share media files on your computer in order to let the media player play these files, you have to setup your computer as a UPnP server. We will explain how to setup your computer as a UPnP server using the following steps.

### ***10.1 Turning your computer into a UPnP server (Windows)***


Your computer does not share media by default. You will have to install a UPnP media server on your computer to add this functionality. If you are using Windows XP, Windows Vista or Windows 7, you can use the built-in UPnP media service of Windows Media Player 11. If you enable this option, your media player can access the music library on your computer. Follow the steps below to enable this option:

1. Click 'Start'.

2. Click 'Programs'.
3. Click 'Windows Media Player '.
4. Click 'Tools', then click 'Options'. The following screen will be displayed:

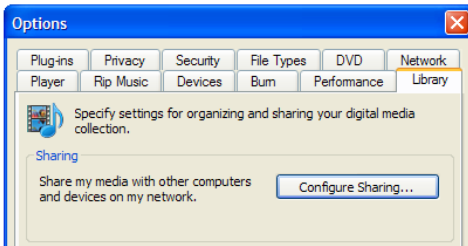

5. Go to the 'Library' tab in the left upper corner of the options window.
6. Now click 'Configure sharing'.
7. Check the "Share my media" checkbox and click OK.

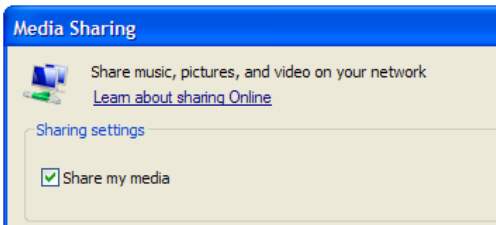

8. A list with detected devices will appear within a few seconds.
9. Click the name of your media player.
10. Click 'Allow'.
11. Click 'Ok'.
12. Click 'Ok'.
13. All files in the media library of Windows Media Player will be shared with your media player from now on. The media library will be accessible using the remote control and display of the media player.

*Note: Steps above are taken with Windows Media Player 11, available for download at <http://www.microsoft.com/windows/windowsmedia/player/>.*

*Hint: Multiple other programs can turn your computer into a UPnP media server. Some of these programs are available for download, like tversity ([www.tversity.com](http://www.tversity.com)) or Twonkymedia ([www.twonkyvision.de](http://www.twonkyvision.de)).*

## 10.2 Play media through your network (UPnP)

1. Make sure the media player is turned on and is completely started.



2. Use the arrow keys to navigate to 'Movies'.
3. Select 'UPNP' and press the 'OK' button.
4. Now you will see a list of available (media) servers in your network. Select the desired UPnP (media) server and press the 'OK' button on the remote control. The available media folders and files will now be displayed.
5. Select the media folder or file you want play and press the 'OK' button on the remote control to start the playback of the file.

### 10.3 Play media through your network (Samba)

1. Make sure your media player is turned on and is completely started.
2. Use the arrow keys to navigate to 'Movies'.
3. Select 'SAMBAA' and press the 'OK' button.
4. Now you will see a list of available SAMBA and/or file servers. Select the desired SAMBA or file server and press the 'OK' button on the remote control. The available media folders or files will be displayed.
5. Select the media folder or file you want to play and press the 'OK' button on the remote control to start the playback of the file.

## 11.0 Other functions

Besides the already mentioned functions, there are some functions which are not mentioned yet. Some of these functions are explained in the following chapter.

### Audio

Night Mode: With this function enabled, the sound will be reduced significantly. This way, you do not disturb other people when using audio. Ideal when using the hdMEDIA RT while people are asleep.

### Video

DNR: Dynamic Noise Reduction, this function removes artifacts and noise for a clear image.

### System

System Update: Using this function, the current firmware can be updated.

Parental Control: Let's you set the strictness of the parental control. A password is required.

HDD Format: Let's you format the hard drive. Ideal when a new hard drive is installed, or the data on your current hard disk is corrupted.

### MISC

Resume Play: Allows you to resume the media file where you left of. This is handy, in case you are not able to view the entire movie at once.

Movie Preview: Allows you to see a preview of the movie in a small screen, select . Press the 'OK' button to view the movie in full screen.

## 12.0 Frequently asked questions

- Q: I have connected the media player to my television using a HDMI cable, but I am not able to see an image. How can I solve this problem?
- A1: Most likely, your television is not set to the correct HDMI source yet. If your television is equipped with multiple HDMI inputs, you have to try-out all available HDMI sources until you see the media player's menu.
- A2: It is also possible a not supported resolution is set on the EM7080. Press the 'TV MODE' button until you see the EM7080's menu.
- Q: I am playing a file which has digital sound. My television is connected to the media player using a DVI adapter plug, but I do not hear any sound. How is this possible?
- A: DVI only delivers image, not sound. If you are using a DVI adapter plug, make sure you use the optical cable or white and red composite cables for sound.
- Q: The manual mentions the media player's ability to play almost all media. What formats and codec's are supported by the hdMEDIA RT?
- A: The hdMEDIA RT supports the following formats and codec's:  
 Video codec's: WMVHD, AVCHD, H.264, X.264, VC-1, MPEG 1/2/3/4, MKV, M2TS, TS, ISO, AVI, MOV and many other formats.  
 Picture formats: HD JPEG, BMP, GIF, TIF, and PNG.  
 Audio formats: AAC, PCM, DOLBY AC3, DTS, DTS-HD (Pass thru), AC3 and DTS stereo down mix. For an exact list, please check our web page.
- Q: The hdMEDIA RT let's you built-in a hard disk. Is there a limitation to the size of the hard disk, and is SATA II supported?
- A: The hdMEDIA RT supports SATA I and SATA II hard disks. You can use hard disks up and to 1.5TB+.
- Q: What file systems does the EM7080 hdMEDIA RT support?
- A: The hdMEDIA RT supports NTFS and FAT32 file systems. The hdMEDIA RT can also read EXT3 file systems.
- Q: I want to delete media content from the internal hard disk. How can I do this?
- A: You can delete content by selecting the desired file and pressing the blue button on the remote control. Select 'Delete' and press the 'OK' button to remove the selected file.
- Q: I am trying to update the firmware using USB. But after every attempt to flash, the firmware is still the same. How is this possible?
- A: Preferably, use the lower USB port. Also, if there is still an old firmware present on the built-in hard disk, the EM7080 will try to access this version.

Remove this version from the local hard disk (or replace the old version with the new one).

## 13.0 Service and support

This users manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please fill out the support form at the website [www.eminent-online.com/support](http://www.eminent-online.com/support).

## 14.0 Warranty conditions

The five-year Eminent warranty applies to all Eminent products unless mentioned otherwise before or during the moment of purchase. When having bought a second-hand Eminent product the remaining period of warranty is measured from the moment of purchase by the product's first owner.

The Eminent warranty applies to all Eminent products and parts inextricably connected to and/or mounted on the main product. Power supply adapters, batteries, antennas and all other products not integrated in or directly connected to the main product and/or products of which, without reasonable doubt, can be assumed that wear and tear show a different pattern than the main product are not covered by the Eminent warranty. Products are not covered by the Eminent warranty when subjected to incorrect/improper use, external influences and/or when opened by parties other than Eminent.

## 15.0 Declaration of Conformity

To ensure your safety and compliance of the product with the directives and laws created by the European Commission you can obtain a copy of the Declaration of Conformity concerning your product by sending an e-mail message to: [info@eminent-online.com](mailto:info@eminent-online.com). You can also send a letter to:

Eminent Computer Supplies  
P.O. Box 276  
6160 AG Geleen  
The Netherlands

Clearly state 'Declaration of Conformity' and the article code of the product of which you would like to obtain a copy of the Declaration of Conformity.



[WWW.EMINENT-ONLINE.COM](http://WWW.EMINENT-ONLINE.COM)

Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Eminent is a member of the Intronic Group