SCANTECH ID

MR-150 / SR-75

PROGRAMMING MENU

Contents

Chapter 1 Description

1.1 Notice 3
1.2 Introduction 4
1.3 Codes Read 4
1.4 Installation 4
1.5 Pin Assignment 6

Chapter 2 Configuration - General

2.1 Flow Chart 8
2.2 Loop of Programming 9
2.3 Factory Default Settings 9
2.4 Main Page of Configuration 10

Chapter 3 Interface and Reading Mode Selection

3.1 Interface Selection 11
3.2 Memory Function 11
3.3 Reading Mode Selection 12

Chapter 4 Communication Parameters

4.1 RS232 Mode Parameters 13
4.2 Keyboard Wedge Mode Parameters..... 15
4.3 Output Characters Parameters 17
4.4 Wand Emulation Mode Parameters..... 19
4.5 OCIA Mode Parameters 20

Chapter 5 Bar Codes & Others

5.1 Symbologies Selection 21
5.2 UPC/EAN/JAN Parameters 24
5.3 Code 39 Parameters 26
5.4 Code 128 Parameters 28
5.5 Interleave 25 Parameters 30
5.6 Industrial 25 Parameters 32
5.7 Matrix 25 Parameters 34
5.8 CODABAR/NW7 Parameters 36
5.9 Code 93 Parameters 38
5.10 Code 11 Parameters 40
5.11 MSI/PLESSEY Code Parameters 42

5.12 BC412 Code Parameters 44
5.13 Code 2 of 6 Parameters 46
5.14 Telepen Parameters 48

Chapter 6 Miscellaneous Parameters

6.1 Language Selection 50
6.2 Bar Code ID 52
6.3 Reading Level 55
6.4 Accuracy 55
6.5 Buzzer Beep Tone 55
6.6 Sensitivity of Continuous Reading Mode ... 56
6.7 Notebook Function 56
6.8 Reverse Output Characters 56
6.9 Set Up Deletion 57
6.10 Set Up Insertion 60
6.11 Set Up IR Sensor..... 63

Appendix

A. Decimal Value Tables 63
B. ASCII Tables 64
C. Function Key Tables 68

Chapter 1 Description

1.1 Notice

The manufacturer shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

FCC Approval

This device had been test in accordance with the procedures given in ANSI C63.4 (1992) and confirmed to complies with the limits for a CLASS B digital pursuant to part 15 of the FCC Rules.

CE Standards

The CE mark as shown here indicates this product had been tested in accordance with the procedures given in European Council Directive 89/336/EEC and confirmed to comply with the European Standard EN55022:1994/ A1: 1995 Class B, EN 55024/1998.

1.2 Introduction

The Decoder is an advanced and versatile decoding facility for barcoding systems .It works with variety of bar code types, reading devices, and computer interfaces. It discriminates about twenty different symbologies automatically.

This menu provide an easy way to config the decoding options and interface selections by scanning bar codes listed in the menu.

1.3 Codes Read

Codes Read
ALL UPC/EAN/JAN , Code 39, Code 39 Full ASCII, Code 128, Interleave 25, Industrial 25, Matrix 25, CODABAR/NW7, Code 11, MSI/PLESSEY, Code 93, China Postage, Code32/Italian Pharmacy
Others available upon request.

1.4 Installation

Unpacking –
Remove the scanner from its packing and check it for damage. If the scanner was defected in transit, please contact your vendor immediately. Be sure that you keep the packing with all accessories contains in the package for your returning of service.

Connecting the scanner –
Keyboard wedge/RS-232C/USB:
Connect the 10-pins RS-45 male connector into the bottom of the scanner and you will hear a "click" when the connection is made.

Power supply for RS-232C scanner–
There are 3 ways to supplying the power, use external +5V power supply, use optional power cable (KBDC) which taking the power from KB wedge or if the host supports +5V power from pin 9.

Installing the scanner to the Host System –
1. Turn off the host system.
2. Connect the power if needed.
3. Connect to the proper port on the host system.
4. Turn on the host system.

Switching cable –
Before removing the cable from the scanner, it is recommended that the power on the host system is off and the power supply has been disconnected from unit.

1. Find the small "Pin-hole" on the bottom of the unit.
2. Use a bended regular paperclip and insert the tip into the hole.
3. You will head a "click", then gentle on the strain-relief of the cable and it will slide out of the

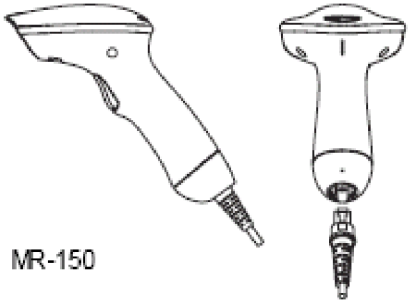

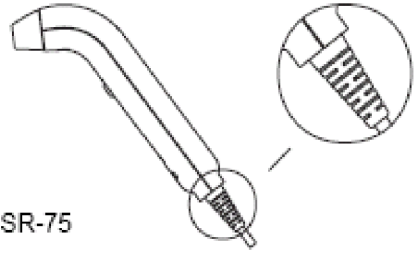

1.5 Pin Assignment

A> Input Port for Mini Decoder

DB 9 Male

Pin No.	Wand / Slot Reader	CCD / Laser Scanner
1	N.C.	S.O.S.
2	DATA	DATA
3	N.C.	N.C.
4	N.C.	N.C.
5	N.C.	TRIGGER
6	N.C.	P. E.
7	GND	GND
8	SHIELD	SHIELD
9	+5V	+5V



B> Output Port

1. PC Keyboard Output

DIN 5 MALE

Pin No.	Function
1	HOST CLK
2	HOST DATA
4	GND
5	Vcc(+5V)



DIN 5 FEMALE

Pin No.	Function
1	KB CLK
2	KB DATA
4	GND
5	Vcc(+5V)

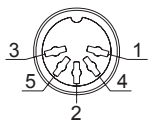

MiniDIN 6 MALE

Pin No.	Function
1	HOST DATA
3	GND
4	Vcc
5	HOST CLK

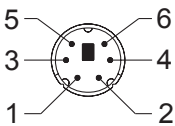

MiniDIN 6 FEMALE

Pin No.	Function
1	KB DATA
3	GND
4	Vcc
5	KB CLK

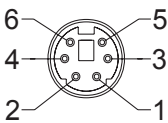

2. RS-232 Output

DB 9 Female

Pin No.	Function
2	TXD
3	RXD
5	GND
7	CTS
8	RTS
Power Lead	Vcc (+5V)

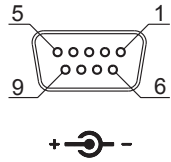

3. WAND Emulation Output

DB 9 Female

Pin No.	Function
2	DATA
7	GND
9	Vcc (+5V)



4. ADB Interface

MiniDIN 4 MALE

Pin No.	Function
1	ADB
3	Vcc
4	GND



MiniDIN 4 FEMALE

Pin No.	Function
1	ADB
3	Vcc
4	GND



5. NEC 9801 Interface

MiniDIN 8 MALE

Pin No.	Function
1	RST
2	GND
3	HOST RDY
4	HOST DATA
5	RTY
8	+5V

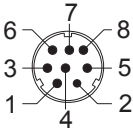

MiniDIN 8 FEMALE

Pin No.	Function
1	RST
2	GND
3	KB RDY
4	KB DATA
5	RTY
8	+5V

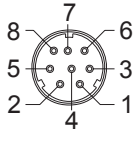

Chapter 2 Configuration - General

2.1 Flow Chart

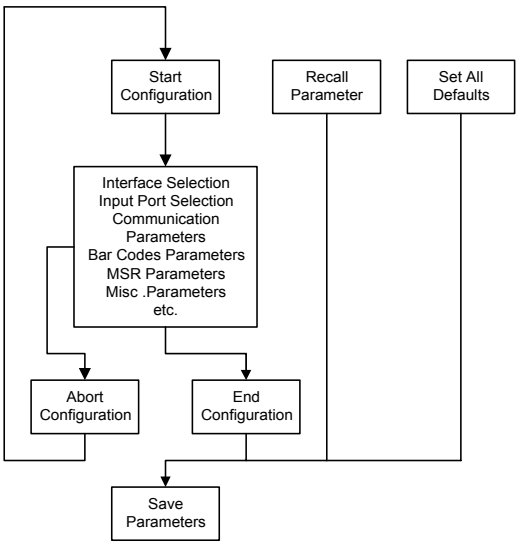

2.2 Loop of Programming

The philosophy of programming parameters has been shown on the flow chart of 2.1. Basically user should

1. Scan Start of Configuration.
2. Scan all necessary labels for parameters that meet applications.
3. Scan End of Configuration to end the programming.
4. To permanently save the settings you programmed, just scan label for Save Parameters.
5. To go back to the Default Settings, just scan label for Set All Defaults.

2.3 Factory Default Settings

The factory default settings are shown with < > and bold in the following sections. You can make your own settings by following the procedures in this manual. If you want to save the settings permanently, you should scan the label of "Save Parameters" in chapter 2.4, otherwise the settings will not be saved after the decoder power is off, and all settings will go back to previous settings.

By scanning "Set All Default" label, the settings will go back to the factory default settings.

2.4 Main Page of Configuration

Save Parameters

%$+/ 0

Recall Stored Parameters

%$+/ 1

Set All Defaults

%$+/ 2

Start Configuration

%$+/ 3

End Configuration

%$+/ 4

Abort Configuration

%$+/ 6

Version Information

%$+/ 5

Save Parameters -
The parameter settings will be saved permanently.

Recall Stored Parameters -
Replace the current parameters by the parameters you saved last time.

Set All Defaults -
Set all the parameters to the factory default settings.

Abort Configuration -
Terminate current programming status.

Version Information -
Display the decoder version information and date code.

Chapter 3 Interface and Reading Mode Selection

3.1 Interface Selection

<Keyboard Mode>

%00U0

RS232 Mode

%00U8

WAND Emulation

%00M2

OCIA Mode

%00M4

USB Mode

%0XO8

3.2 Memory Function

<Enable>

%0XI2

Disable

%0XI0

3.3 Reading Mode Selection

<Good Read OFF>

%0271

Trigger ON/OFF

%0270

Continuous/Trigger OFF

%0272

Testing

%0275

Continuous/Auto Power On

%0273

Flash

%0274

Flash/Auto Power On

%0276

Reserved1

%0277

Reserved2

%09F8

Reserved3

%09F9

Reserved4

%09FA

Reserved5

%09FB

Ch.4 Communication Parameters

4.1 RS232 Mode Parameters

A> Set Up BAUD Rate

600

%0Y70

1200

%0Y71

2400

%0Y72

4800

%0Y73

<9600>

%0Y77

19200

%0Y74

38400

%0Y75

B> Set Up Data Bits

7 Data Bits

%0Y80

<8 Data Bits>

%0Y88

C> Set Up Stop Bits

<1 Bit>

%0YO8

2 Bits

%0YO0

D> Set Up Parity

<None>

%0YN7

Even

%0YN2

Odd

%0YN3

Mark

%0YN1

Space

%0YN0

E> Handshaking

RTS/CTS Enable

%0188

<RTS/CTS Disable>

%0180

ACK/NAK Enable

%0144

<ACK/NAK Disable>

%0140

XON/XOFF Enable

%03K4

<XON/XOFF Disable>

%03K0

4.2 Keyboard Wedge Mode Parameters

A> Terminal Type

<IBM PC/AT, PS/2>

%0ZF0

IBM PC/XT

%0ZF1

IBM PS/2 25, 30

%0ZF2

NEC 9800

%0ZF3

Apple Desktop Bus(ADB)

%0ZF4

IBM 5550

%0ZF5

IBM 122 Key (1)

%0ZF6

IBM 102 Key

%0ZF7

IBM 122 Key (2)

%0ZF8

Reserved 1

%0ZF9

Reserved 2

%0ZFA

Reserved 3

%0ZFB

Reserved 4

%0ZFC

Reserved 5

%0ZFD

B> Upper/Lower Case

<No Change>

%0330

Upper Case

%0331

Lower Case

%0332

C> Send Character by ALT Method

Enable

%03O8

<Disable>

%03O0

D> Select Numerical Pad

ON

%01K4

<OFF>

%01K0

4.3 Output Characters Parameters

A> Select Terminator

<CR+LF>

%7 S2 +

None

%7 S7 +

CR

%7 S0 +

LF

%7 S1 +

Space

%7 S4 +

HT(TAB)

%7 S3 +

STX-ETX

%7 S5 +

B> Time-out Between Characters

<0 ms>

%0070

5 ms

%0071

10 ms

%0072

25 ms

%0073

50 ms

%0074

100 ms

%0075

200 ms

%0076

300 ms

%0077

4.4 Wand Emulation Mode Parameters

A> TTL Level Representation

<Bar Equals High>

%02K4

Bar Equals Low

%02K0

B> Scan Speed Selection

<Fast>

%0288

Slow

%0280

C> Output Format Selection

<Output as Code 39>

%02O8

Output as Code 39
Full ASCII

%02O0

Output as Original
Code Format

%0XK4

4.5 OCIA Mode Parameters

<NCR 8 Bit Format>

%02J0

NCR 9 Bit Format

%02J1

Spectra-Physics

%02J2

Nixdorf

%02J3

Ch.5 Bar Codes & Others

5.1 Symbologies Selection

UPC-A **<ON>**

%0A44

OFF

%0A40

UPC-E **<ON>**

%0BO8

OFF

%0BO0

EAN-13/JAN-13 **<ON>**

%0A22

OFF

%0A20

EAN-8/JAN-8 **<ON>**

%0A11

OFF

%0A10

CODE 39 **<ON>**

%0EO8

OFF

%0EO0

CODE 128 **<ON>**

%0FO8

OFF

%0FO0

CODABAR/NW7 **<ON>**

%0JO8

OFF

%0JO0

Interleave 25 **<ON>**

%0 GO8

OFF

%0 GO0

Industrial 25 ON

%0 HO8

<OFF>

%0 HO0

Matrix 25 ON

%0 I O8

<OFF>

%0 I O0

CODE 93 ON

%0 KO8

<OFF>

%0 KO0

CODE 11 ON

%0 L O8

<OFF>

%0 L O0

China Postage ON

%0 MO8

<OFF>

%0 MO0

MSI/PLESSEY ON

%0 NO8

<OFF>

%0 NO0

BC412 ON

%0OO8

<OFF>

%0OO0

Code 2 of 6 ON

%0PO8

<OFF>

%0PO0

Telepen ON

%0TO8

<OFF>

%0TO0

Reserved4 ON

%0QO8

<OFF>

%0QO0

Reserved5 ON

%0RO8

<OFF>

%0RO0

Reserved6 ON

%0SO8

<OFF>

%0SO0

Select All Bar Codes

%1A/ +

5.2 UPC/EAN/JAN Parameters

A> Reading Type

UPCA=EAN13 ON

%0AK4

UPCA=EAN13<OFF>

%0AK0

ISBN Enable

%0B88

ISBN **<Disable>**

%0B80

ISSN Enable

%0B44

ISSN **<Disable>**

%0B40

Decode with Supplement

%01O0

<Autodiscriminate Supplement>

%01O8

B> Supplementals Set Up

<Not Transmit>

%0B33

Transmit 2 Code

%0B31

Transmit 5 Code

%0B32

Transmit 2&5 Code

%0B30

C> Check Digit Transmission

UPC-A Check Digit Transmission **<ON>**

%0AI 2

OFF

%0AI 0

UPC-E Check Digit Transmission **<ON>**

%0BI 2

OFF

%0BI 0

EAN-8 Check Digit Transmission <ON>

%0A88

OFF

%0A80

EAN-13 Check Digit Transmission <ON>

%0AH1

OFF

%0AH0

ISSN Check Digit Transmission <ON>

%0BK4

OFF

%0BK0

5.3 Code 39 Parameters

A> Type of Code

<Standard>

%0EH1

Full ASCII

%0EH0

Italian Pharmacy/Code 32
<OFF>

%0E80

Italian Pharmacy/
Code 32 ON

%0E88

B> Check Digit Transmission

**<Do Not Calculate
Check Digit>**

%0EM2

Calculate Check Digit
& Transmit

%0EM6

Calculate Check Digit
& Not Transmit

%0EM4

C> Output Start/Stop Character

Enable

%0E44

<Disable>

%0E40

D> Decode Asterisk

Enable

%0E22

<Disable>

%0E20

E> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4E1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4E00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4E01

1. 2nd Set Begin

%4E00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4E02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2C0+

5.4 Code 128 Parameters

A> Check Digit Transmission

Do Not Calculate
Check Digit

%0FN1

Calculate Check
Digit & Transmit

%0FN7

**<Calculate Check Digit
& Not Transmit>**

%0FN5

B> Append FNC2

ON

%0F88

<OFF>

%0F80

C> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4F1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4F00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4F01

1. 2nd Set Begin

%4F00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4F02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2C1+

5.5 Interleave 25 Parameters

A> Check Digit Transmission

<Do Not Calculate Check Digit>

%0 GN3

Calculate Check Digit & Transmit

%0 GN7

Calculate Check Digit & Not Transmit

%0 GN5

B> Set Up Number of Character

<Even>

%0 G8 8

Odd

%0 G8 0

C> Brazilian Banking Code

<Disable>

%0 G4 0

Enable

%0 G4 4

D> Set Up Code Length

To set the fixed length:
1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4 G1 +

Fix Length (2 Sets Available)

1. 1st Set Begin

%4 G0 0

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4 G0 1

1. 2nd Set Begin

%4 G0 0

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4 G0 2

Minimum Length

1. Begin

%2 + - /

2. Decimal Value (Appendix A)

3. Complete

%2 C2 +

5.6 Industrial 25 Parameters

A> Check Digit Transmission

<Do Not Calculate Check Digit>

%0 HN3

Calculate Check Digit & Transmit

%0 HN7

Calculate Check Digit & Not Transmit

%0 HN5

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4 H1 +

Fix Length (2 Sets Available)

1. 1st Set Begin

%4 H0 0

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4 H0 1

1. 2nd Set Begin

%4 H0 0

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4 H0 2

Minimum Length

1. Begin

%2 + - /

2. Decimal Value (Appendix A)

3. Complete

%2 C3 +

5.7 Matrix 25 Parameters

A> Check Digit Transmission

<Do Not Calculate Check Digit>

%0I N3

Calculate Check Digit & Transmit

%0I N7

Calculate Check Digit & Not Transmit

%0I N5

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4I 1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4I 00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4I 01

1. 2nd Set Begin

%4I 00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4I 02

Minimum Length

1. Begin

%2+- /

2. Decimal Value (Appendix A)

3. Complete

%2C4+

5.8 CODABAR/NW7 Parameters

A> Set Up Start/Stop Characters Upon Transmission

ON

%0 J H1

<OFF>

%0 J H0

B> Transmission Type of Start/Stop

<A/B/C/D> <Start>

%0 4 VF

A Start

%0 4 V1

B Start

%0 4 V2

C Start

%0 4 V4

D Start

%0 4 V8

<A/B/C/D> <Stop>

%0 4 F F

A Stop

%0 4 F 1

B Stop

%0 4 F 2

C Stop

%0 4 F 4

D Stop

%0 4 F 8

C> Set Up Code Length

To set the fixed length:
1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4J1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4J00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4J01

1. 2nd Set Begin

%4J00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4J02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2C5+

5.9 Code 93 Parameters

A> Check Digit Transmission

<Calculate Check 2 Digits & Not Transmit>

%0KN4

Do Not Calculate Check Digit

%0KN3

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4K1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4K00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4K01

1. 2nd Set Begin

%4K00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4K02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2C6+

5.10 Code 11 Parameters

A> Check Digit Transmission

<Do Not Calculate Check Digit>

%0 L N3

Calculate Check 1 Digit & Transmit

%0 L N7

Calculate Check 1 Digit & Not Transmit

%0 L N5

Calculate Check 2 Digits & Transmit

%0 L N6

Calculate Check 2 Digits & Not Transmit

%0 L N4

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4L1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4L00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4L01

1. 2nd Set Begin

%4L00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4L02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2C7+

5.11 MSI/PLESSEY Code Parameters

A> Check Digit Transmission

<Do Not Calculate Check Digit>

%0 NN3

Calculate Check Digit & Transmit

%0 NN7

Calculate Check Digit & Not Transmit

%0 NN5

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4 N1 +

Fix Length (2 Sets Available)

1. 1st Set Begin

%4 N0 0

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4 N0 1

1. 2nd Set Begin

%4 N0 0

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4 N0 2

Minimum Length

1. Begin

%2 + - /

2. Decimal Value (Appendix A)

3. Complete

%2 C9 +

5.12 BC 412 Code Parameters

A> Check Digit Transmission

Do Not Calculate
Check Digit

%0 ON3

<Calculate Check Digit & Transmit>

%0 ON7

Calculate Check Digit
& Not Transmit

%0 ON5

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4O1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4O00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4O01

1. 2nd Set Begin

%4O00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4O02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2CA+

5.13 Code 2 of 6 Parameters

A> Check Digit Transmission

Do Not Calculate
Check Digit

%0 PN3

<Calculate Check Digit & Transmit>

%0 PN7

Calculate Check Digit
& Not Transmit

%0 PN5

B> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4P1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4P00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4P01

1. 2nd Set Begin

%4P00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4P02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2CB+

5.14 Telepen Parameters

A> Type of Code

<Telepen ASCII>

%0T80

Telepen Numeric

%0T88

B> Check Digit Transmission

Do Not Calculate
Check Digit

%0TN3

Calculate Check
Digit & Transmit

%0TN7

**<Calculate Check Digit
& Not Transmit>**

%0TN5

C> Set Up Code Length

To set the fixed length:

1. Scan the "Begin" label of the desired set.
2. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the length to be read.
3. Scan the "Complete" label of the desired set.

Repeat the steps 1 - 3 to set additional lengths.

<Variable>

%4T1+

Fix Length (2 Sets Available)

1. 1st Set Begin

%4T00

2. Decimal Value (Appendix A)

3. 1st Set Complete

%4T01

1. 2nd Set Begin

%4T00

2. Decimal Value (Appendix A)

3. 2nd Set Complete

%4T02

Minimum Length

1. Begin

%2+-/

2. Decimal Value (Appendix A)

3. Complete

%2CF+

Ch.6 Miscellaneous Parameters

6.1 Language Selection

<US English>

%0ZV0

UK English

%0ZV1

Italian

%0ZV2

Spanish

%0ZV3

French

%0ZV4

German

%0ZV5

Swedish

%0ZV6

Switzerland

%0ZV7

Hungarian

%0ZV8

Japanese

%0ZV9

Belgium

%0ZVA

Portuguese

%0ZVB

Denmark

%0ZVC

Netherlands

%0ZVD

Turkey

%0ZVE

Reserved1

%0ZVF

6.2 Bar Code ID

ON

%00H1

<OFF>

%00H0

Default

%913+

With this function ON, a leading character will be added to the output string while scanning code, user may refer to the following table to know what kind of bar code is being scanned.

Please refer to the table below for matching code ID of codes read in.

Code Type	ID	Code Type	ID
UPC-A	A	UPC-E	B
EAN-8	C	EAN-13	D
CODE 39	E	CODE 128	F
Interleave 25	G	Industrial 25	H
Matrix 25	I	Codabar/NW7	J
CODE 93	K	CODE 11	L
China Postage	M	MSI/PLESSEY	N
BC412	O	Code 2 of 6	P
Telepen	T		

User Define Code ID

To set the code ID:

1. Scan the symbologies label.
2. Go to the ASCII Tables in Appendix B, scan label that represents the desired code ID.

Note:
User define code ID will override default value. Program will not check the conflict. It is possible to have more than two symbologies which have same code ID.

UPC-A

%91A+

EAN-13/JAN-13

%91Y+

CODE 39

%91E+

CODABAR/NW7

%91J+

Industrial 25

%91H+

CODE 93

%91K+

China Postage

%91M+

BC412

%91O+

UPC-E

%91B+

EAN-8/JAN-8

%91Z+

CODE 128

%91F+

Interleave 25

%91G+

Matrix 25

%91I+

CODE 11

%91L+

MSI/PLESSEY

%91N+

Code 2 of 6

%91P+

Telepen

%91T+

Reserved4

%91Q+

Reserved5

%91R+

Reserved6

%91S+

6.3 Reading Level

Bar Equals High

%03I2

<Bar Equals Low>

%03I0

6.4 Accuracy

<1 Time>

%0130

2 Times

%0131

3 Times

%0132

4 Times

%0133

6.5 Buzzer Beep Tone

<High>

%01J3

Medium

%01J2

Low

%01J1

Off

%01J0

6.6 Sensitivity of Continuous Reading Mode

<Fast>

%0388

Slow

%0380

6.7 Notebook Function

Enable

%0344

<Disable>

%0340

6.8 Reverse Output Characters

<Disable>

%03H0

Enable

%03H1

6.9 Setup Deletion

To setup the deletion of output characters:

1. Scan the label of the desired set below.
2. Scan the label of the desired symbology.
3. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the desired position to be deleted.
4. Scan the "Complete" label of "Character Position to be Deleted".
5. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the number of characters to be deleted.
6. Scan the "Complete" label of "Number of Characters to be Deleted".

Repeat the steps 1 - 6 to set additional deletion.

A> Select Deletion Set Number

1. 1st Set

%800+

2. 2nd Set

%801+

3. 3rd Set

%802+

4. 4th Set

%803+

5. 5th Set

%804+

6. 6th Set

%805+

B> Symbologies Selection

UPC-A

%81A+

UPC-E

%81B+

EAN-13/JAN-13

%81Y+

EAN-8/JAN-8

%81Z+

CODE 39

%81E+

CODE 128

%81F+

CODABAR/NW7

%81J+

Interleave 25

%81G+

Industrial 25

%81H+

Matrix 25

%81I+

CODE 93

%81K+

CODE 11

%81L+

China Postage

%81M+

MSI/PLESSEY

%81N+

BC412

%81O+

Code 2 of 6

%81P+

Telepen

%81T+

Resvered4

%81Q+

Resvered5

%81R+

All Codes

%81S+

None

%814+

C> Character Position to be Deleted

1. Decimal Value
   (Appendix A)

2. Complete

%820+

D> Number of Characters to be Deleted

1. Decimal Value
   (Appendix A)

2. Complete

%830+

6.10 Setup Insertion

To setup the insertion of output characters:

1. Scan the label of the desired set.
2. Scan the label of the desired symbology.
3. Go to the Decimal Value Tables in Appendix A, scan label(s) that represents the desired position to be inserted.
4. Scan the "Complete" label of "Character Position to be Inserted".
5. Go to the ASCII Tables in Appendix B or Function Key Tables in Appendix C, scan label(s) that represents the desired characters to be inserted.
6. Scan the "Complete" label of "Characters to be Inserted".

Repeat the steps 1 - 6 to set additional insertion.

A> Select Insertion Set Number

1. 1st Set

%500+

2. 2nd Set

%501+

3. 3rd Set

%502+

4. 4th Set

%503+

5. 5th Set

%504+

6. 6th Set

%505+

B> Symbologies Selection

UPC-A

%51A+

UPC-E

%51B+

EAN-13/JAN-13

%51Y+

EAN-8/JAN-8

%51Z+

CODE 39

%51E+

CODE 128

%51F+

CODABAR/NW7

%51J+

Interleave 25

%51G+

Industrial 25

%51H+

Matrix 25

%51I+

CODE 93

%51K+

CODE 11

%51L+

China Postage

%51M+

MSI/PLESSEY

%51N+

BC412

%51O+

Code 2 of 6

%51P+

Telepen

%51T+

Resvered4

%51Q+

Resvered5

%51R+

All Codes

%51S+

None

%514+

C> Character Position to be Inserted

1. Decimal Value
   (Appendix A)

2. Complete

%520+

D> Characters to be Inserted

1. ASCII Table
   (Appendix B)

2. Complete

%530+

6.11 Setup IR Sensor

<Disable>

%0XH0

Enable

%0XH1

Appendix A Decimal Value Table

0

1

2

3

4

5

6

7

8

9

Appendix B ASCII Table

NULL

00

SOH

01

STX

02

ETX

03

EOT

04

ENQ

05

ACK

06

BEL

07

BS

08

HT

09

LF

0A

VT

0B

FF

0C

CR

0D

SO

0E

SI

0F

DLE

10

DC1

11

DC2

12

DC3

13

DC4

14

NAK

15

SYN

16

ETB

17

CAN

18

EM

19

SUB

1A

ESC

1B

FS

1C

GS

1D

RS

1E

US

1F

SPACE

20

!

21

"

22

#

23

$

24

%

25

&

26

'

27

(

28

)

29

*

2A

+

2B

,

2C

-

2D

.

2E

/

2F

0

30

1

31

2

32

3

33

4

34

5

35

6

36

7

37

8

38

9

39

:

3A

;

3B

<

3C

=

3D

>

3E

?

3F

@

40

A

41

B

42

C

43

D

44

E

45

F

46

G

47

H

48

I

49

J

4A

K

4B

L

4C

M

4D

N

4E

O

4F

P

50

Q

51

R

52

S

53

T

54

U

55

V

56

W

57

X

58

Y

59

Z

5A

[

5B

\

5C

]

5D

^

5E

_

5F

`

60

a

61

b

62

c

63

d

64

e

65

f

66

g

67

h

68

i

69

j

6A

k

6B

l

6C

m

6D

n

6E

o

6F

p

70

q

71

r

72

s

73

t

74

u

75

v

76

w

77

x

78

y

79

z

7A

{

7B

|

7C

}

7D

~

7E

DEL

7F

Appendix C Function Key Table

F1

C0

F2

C1

F3

C2

F4

C3

F5

C4

F6

C5

F7

C6

F8

C7

F9

C8

F10

C9

F11

CA

F12

CB

Insert

CC

Delete

CD

Home

CE

Page Up

CF

Page Down

D0

End

D1

Left

D2

Right

D3

Up

D4

Down

D5

Save Parameters

%$+/ 0

Recall Stored Parameters

%$+/ 1

Set All Defaults

%$+/ 2

Start Configuration

%$+/ 3

End Configuration

%$+/ 4

Abort Configuration

%$+/ 6

Version Information

%$+/ 5

Ver 3.5