

FPMA-D930


Before assembly

Please spend some times to read this and follow the procedures step by step.


Some panels are viewed differently from the exploded drawing below. This is for extra clarity.

Do not discard any of the packaging until you have checked all the parts and the package of fittings. If you are missing any of the parts, please contact the store from which you purchased your products. The staff will do their best to help you.

FPMA-D930 parts

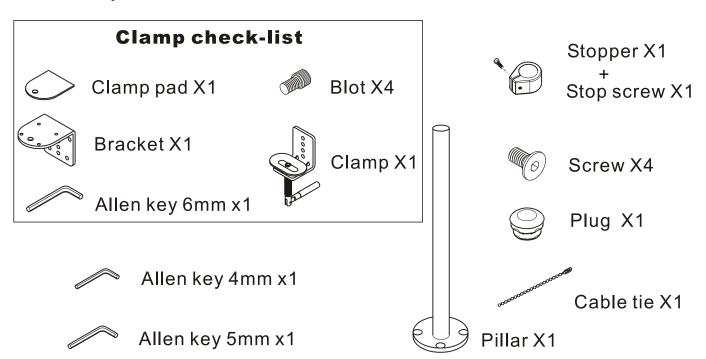

Standard clamp type

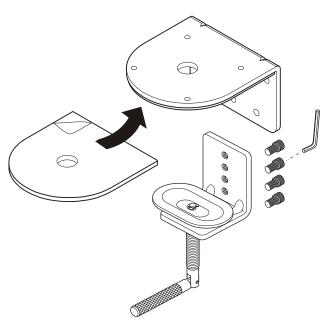

Use 6mm Allen key to secure the cranking unit to the bracket with at least two bolts.(For desk 15~100mm thick, over 30mm is suggested.)Use 4mm Allen key to secure the pillar & clamp with 4 screws.




FPMA-D930

Before assembly

Please spend some times to read this and follow the procedures step by step.

Some panels are viewed differently from the exploded drawing below. This is for extra clarity. Do not discard any of the packaging until you have checked all the parts and the package of fittings. If you are missing any of the parts, please contact the store from which you purchased your products. The staff will do their best to help you.

Axle sheath x2

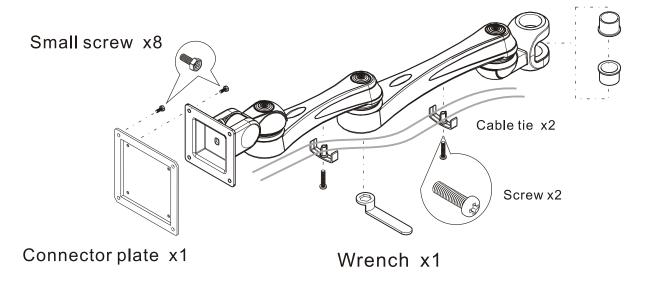

Check the VESA interface before assembly.

75mmx75mm VESA interface.

Place LCD on the proper position on desk.


Secure the VESA to the LCD with four screws.


100mmx100mm VESA interface.

Place LCD on the proper position on desk.

Secure 75x75mm VESA four to 100x100mm VESA with screws.

Secure the 100x100mm VESA to the LCD with four screws.

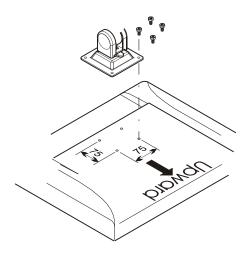

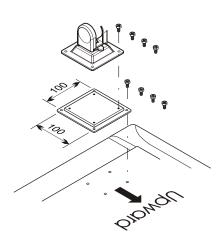





FPMA-D930

Assembly guide

Fix the clamp on the desk, then secure the pillar with 4 screws.

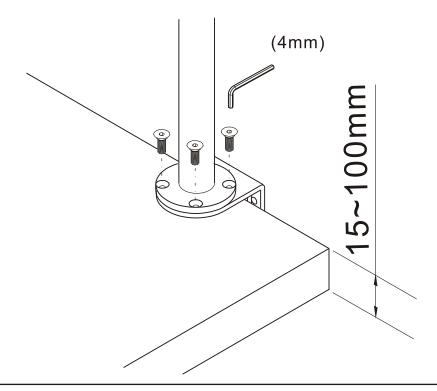

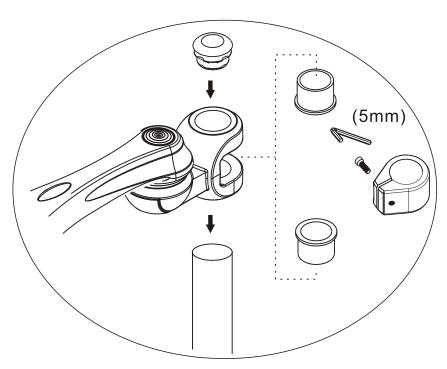

Put axle sheaths into upper and beneath holes of the connection block. Then put the stopper in together with pillar. Adjust the level of high to the most comfortable view. Secure it with screw and then put in the plug.

